

## English

**5510 • 5520 • 5525 • 5530**  
**5535 • 5540 • 5550 • 5560**

Before you start, please refer to the electrical safety instructions on page 63 (Great Britain only).

**Please keep both flaps open when reading these operating instructions.**



### Tools for your Vacuum Cleaner



Dust bags



Telescopic tube **5510**



Back saver tube **5520/25/30/35/40/50/60**



Hose handle **5510/20/25/30/35/40**



Hose handle with remote control **5550/60**



Carpet/hard floor nozzle



Turbo nozzle **5540**



Power nozzle **5560**



Crevice nozzle



Upholstery nozzle **5510/20/25/30/35/40**



Dusting brush **5510/20/25/30/35/40**



Combination nozzle/brush **5550/60**



Tool holder **5510/20/25/30/35/40**



### Ensuring your safety

The cleaner is for domestic use only and has been designed to ensure maximum safety and performance. Please follow these simple precautions:



The cleaner is double-insulated so it must not be earthed



The cleaner is only to be used by adults



Always store in a dry place



Do not use to pick up liquids



Avoid sharp objects



Do not pick up hot cinders or lighted cigarette ends



Do not use near flammable gases



Avoid tugging on the mains cable and check cable regularly for damage



**Note: Do not use cleaner with a damaged cable. If damaged the cable should be replaced at an Electrolux Service Centre**



The plug must be removed from the socket-outlet before cleaning or maintaining the appliance



All service and repairs must be carried out by authorised Electrolux service staff



### Getting started

- Check dust bag is in place.
- Insert hose **5510/20/30/35/40** and pins **5550/60** until catch clicks to engage (Press catch to release).
- Attach telescopic tube **5510** or back saver tube **5520/25/30/35/40/50/60** to hose handle.
- Attach floor nozzle to tube.
- Use back saver tube **5520/25/30/35/40/50/60** in positions shown for normal cleaning or cleaning under low furniture. To adjust, press catch and twist lower tube.

- Extend cable and connect to mains ensuring cable is not twisted. Move foot pedal forward to reel cable in/out as required. Move foot pedal back to lock extended cable in place. Press foot pedal to rewind (please hold the plug to prevent it striking you or the machine).
- Press on/off foot pedal to activate cleaner. (Press on/off foot pedal to place cleaner on standby. Indicator will illuminate **5550/60**).
- To increase/decrease suction, adjust control on cleaner body **5510/20/25/30/35/40** or hose handle **5550/60**. Suction can also be regulated on hose handle **5510/20/25/30/35/40** by opening/closing aperture.



### Your Vacuum Cleaner features

- A Mains cable
- B Cable foot pedal
- C Suction control regulator **5510/20/25/30/35/40**
- D Dust bag full indicator **5510/20/25**
- E CleanStream filter indicator **5530/35/40/50/60**
- F Standby/Overheat Indicator: Indicator will 'illuminate' when cleaner is on standby **5550/60**, and 'flash' if cleaner overheats **5530/35/40/50/60**
- G Dust bag full indicator **5530/35/40/50/60**
- H Cover release for dust bag/filter compartment
- I Hose connection
- J Power outlet (for the use of power driven tools) **5530/35/40/50/60**
- K Back saver carrying handle
- L Tool holder (for attachment to hose handle) **5510/20/25/30/35/40**
- M Hose handle with suction regulator, power nozzle on/off switch, power nozzle socket **5550/60**
- N On/off switch
- O Temporary parking position for floor nozzle and extension tubes when in use
- P Storage slot for floor nozzle and extension tubes



### Getting the best results

#### Using Carpet/Hard floor nozzle



**Carpets:** Use floor nozzle with lever in this position. Reduce suction power for loose rugs.



**Hard floors:** Use floor nozzle with lever in this position.



#### Using Turbo nozzle 5540 or Power nozzle 5560

**Precautions:** Only use nozzle on carpets with a pile depth under 15 mm. Do not use on animal skins or rugs with long fringes. To avoid damaging your carpet, do not keep nozzle stationary whilst brush is rotating. Do not pass nozzle over mains cable and switch off nozzle immediately after use.

- Attach turbo nozzle **5540** or power nozzle **5560** to tubes.
- Connect power nozzle plug to hose handle socket and use clips to secure cable to tube **5560**.
- Push on/off switch to activate power nozzle **5560**.
- Note: Suction can also be regulated on turbo nozzle by opening/closing air vent **5540**.

#### Cleaning Turbo nozzle 5540 or Power nozzle 5560

- Disconnect from mains and remove entangled threads from nozzle by snipping threads with scissors.
- To clean inside nozzle, open cover by unscrewing 5540 or by releasing catches 5560.
- Remove brush cylinder and supports. Clean as necessary and replace. To clean wheels, gently lever them from their mountings. Replace cover ensuring it is properly fastened.

#### Using combination nozzle/brush 5550/60

- Use in position shown for cleaning upholstery.
- Use in position shown for dusting. Attach to hose handle for storage.



#### Dust bag indicator and changing the dust bag

The dust bag should be changed when full.



**5510/20/25** the dust bag indicator window will turn red when filling and completely red when full. **5530/35/40/50/60** the dust bag indicator window will light up when full. If the dust bag should accidentally get broken in the cleaner, take cleaner to Electrolux Service Centre for cleaning.



To check the dust bag, the cleaner must be switched on, with all attachments connected and off the floor.

The dust bag full indicator may signify that the bag is blocked (occasionally caused by very fine dust) which will cause loss of suction and may result in overheating. If this occurs change the dust bag even if it is not full.

#### To change the dust bag:

- Open the cleaner cover.
- Pull the sliding tab to remove the dust bag.
- Insert new dust bag by sliding the bag slots into the holder. Close cover.

#### We recommend the dust bag is changed:

- \* After using a carpet cleaning powder.
- \* If there is a bad smell from the cleaner, then you should also change the filter.

#### Note: Use only Electrolux original dust bags and filters:

**Micro filter (ref. EF 17)**

**CleanStream filter (ref. EF 25)**



#### Dust bag safety device

To avoid damaging the cleaner, do not use it without a dust bag. A safety device is fitted which prevents the cover closing without a dust bag. Do not attempt to force cover shut.

#### Changing the filters



Never use the cleaner without the filters in place. The Motor Protection filter should be changed twice a year for normal usage.

#### To change Motor Protection filter:

- Open the cleaner cover.
- Remove filter and covering strip.
- Important: Insert new filter with original covering strip securely in place. Close cover.

The Micro filter **5510/20/25** should be changed every fifth dust bag.

#### To change Micro filter:

G) Open the filter cover.

H) Replace filter and close cover ensuring it is properly fastened.

The CleanStream filter should be cleaned when the indicator light is on **5530/35/40/50/60**.

#### To clean the CleanStream filter:

I) Open the filter cover and remove filter unit.

J) Rinse the inside (dirty side) of the filter unit under warm tap water only, keeping the outside dry. **Do not use cleaning agents and avoid touching the delicate filter surface.** Tap the filter frame to remove excess water. Repeat cleaning procedure four times and allow the filter to air dry. The original filtering performance is now restored. Replace the unit back into the cleaner and close cover ensuring it is properly fastened.



#### Troubleshooting

**Power:** If the electric power does not come on, disconnect from mains and check plugs, cable and fuses where appropriate.

The cleaner may switch itself off in event of severe blockage or excessively dirty filters (on **5530/35/40/50/60** overheat indicator will flash). In such cases, disconnect from mains and allow to cool for 30 minutes. Clear blockage and/or replace filter(s) and restart.

The cleaner features a safety valve. The valve feeds cool air to the machine in case the hose or tube is blocked. The valve may also trigger e.g. when vacuum cleaning carpets or other soft materials. When the nozzle is lifted, the valve is reset.

If the safety valve triggers repeatedly during normal use, check and remedy any blockage in the hose, tube, nozzle or filters.

The clearing of blocked hoses is not covered by the guarantee. To avoid blockages and maintain suction efficiency, the floor nozzles should be cleaned regularly using the hose handle.

**Water:** If water is sucked into the cleaner the motor must be changed at an Electrolux Service Centre.

If you have any comments on the cleaner or the Instruction for Use Booklet please e-mail us on: [floorcare@electrolux.se](mailto:floorcare@electrolux.se)



**ANY PROBLEMS? Something missing?**  
Don't understand the instructions?

**DON'T TAKE** Need more help?

**IT BACK TO THE SHOP**

We are only a telephone call away.

**CUSTOMER HELPLINE**

 **Electrolux 08706 055 055**

