

Совместимые партномера:

313jx, 330-9808, 36001563, ADP-40PH AB, ADP-40TH A, AK.040AP.024, AP.04001.002, IU40-11190-011s, LT20TVL, PA-1300-04, Pa-1400-12

Подходит к моделям:

ACER
AO521
AO522-bz897
AO532h
AO533
AO722-0427
AO722-0498
AO722-0609
AO722-0825
AO722-0879
AO722-bz699
AO753
AOD150-1165
AOD255
AOD257
AOD260
AOD270-1410
AOD270-1679
AOD270-1824
AOD270-1834
AOD270-1835
AOD270-1865
AOHAPPY
As1830t-68u118
Aspire 1830
Aspire 1830T
Aspire 1830TZ
ASPIRE ONE
Aspire One 10.1"
Aspire One 521
Aspire One 522
Aspire One 531h
Aspire One 532h
Aspire One 533
Aspire One 722
Aspire One 8.9"
Aspire One A110
Aspire one A110L
Aspire One A110L Series
Aspire one A110X
Aspire One A150-1006
Aspire One A150-1049
Aspire One A150-1126
Aspire One A150-1249
Aspire One A150-1382
Aspire One A150-1447
Aspire One A150-1493
Aspire One A150-1532
Aspire One A150-1570

Aspire One A150-1672
Aspire One A150-1890
Aspire One A150-1983
Aspire one A150L
Aspire One A150L Series
Aspire one A150X
Aspire One A150X Series
ASPIRE ONE AO532H
Aspire One AOA110-1295 Series
aspire one AOA110-1626 series
Aspire One AOA150-1006 Series
Aspire One D150-1044
Aspire One D150-1125
Aspire One D150-1165
Aspire One D150-1197
Aspire One D150-1322
Aspire One D150-1462
Aspire One D150-1577
Aspire One D150-1587
Aspire One D150-1606
Aspire One D150-1647
Aspire One D150-1860
Aspire One D150-1920
Aspire One D150-1B
Aspire One D150-1Bk
Aspire One D150-1Br
Aspire One D250
Aspire One D255
Aspire One D260
aspire one ZG5
D150
D257
D270
EC19C
eMachines eM250
eMachines eM350
eMachines eM355
Happy 2
Happy2-1612
Happy2-1828
Happy2-1872
ICONIA TAB W500
ICONIA W500
LT21
LT22
LT23
Timelinx 1830t
TravelMate 8172
TravelMate 8172T

ACER 5236 ,
ACER AC700 ,
ACER AC710 ,
ACER AOA150 1570 UMPC ,

ACER AOA150 bc UMPC ,
ACER B113 E ,
ACER C710 ,
ACER F5 371 ,
ACER F5 372 ,
ACER P246 M 598B ,
ACER P256 M 39NG ,
ACER V5 121 ,
ACER V5 122 ,
ACER V5 122P ,
ACER V5 123 ,
ACER V5 131 ,
ACER V5 132 ,
ACER V5 132P ,
ACER V5 171 ,
ACER W501