



ENGLISH

ELECTRIC KETTLE VT-7062

The liquid heating appliance (kettle) is intended for boiling drinking water only.

DESCRIPTION

1. Kettle body
2. Kettle spout and mesh filter
3. Lid
4. Lid opening button
5. Handle
6. Water level scale
7. ON/OFF button
8. Light indication
9. Base
10. Cord storage

NOTES:

- Fill the kettle with water up to the maximal mark «MAX», determine the water level using the scale (6).
- Close the lid (3), place the kettle on the base (9). Make sure that the kettle lid (3) is closed tightly.
- To switch the kettle on press the on/off button (7) (the button will be fixed in the lower position), the light indication (8) will light up.
- Once water starts boiling, the kettle will be switched off automatically, the button (7) will switch to the upper position and the light indication (8) will go out. Pour water out and repeat the water boiling procedure 2-3 times.

Notes:

- Before using the kettle, make sure that the on/off button (7) is not blocked by any foreign objects, and the lid (3) is tightly closed, otherwise auto switch off of the kettle is not possible.
- Before removing the kettle from the base, make sure that the kettle is switched off (that means the on/off button (7) is in the upper position).

ATTENTION!

- For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA, to install RCD, contact a specialist.

SAFETY MEASURES

Before using the unit, read this manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Make sure that the unit for intended purpose only and in strict accordance with the instruction manual.

• Make sure that your home mains voltage corresponds to the voltage specified on the unit.

• The power cord is equipped with a «europlug» plug; fit it into the socket with a reliable grounding contact.

• To avoid the risk of fire, do not use adapters for connecting the kettle to the mains.

• When removing the kettle from the base (9), make sure that it is switched off (the button (7) is in the upper position).

• Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.

• Do not use the kettle near heat sources or open flame.

• Do not use the unit in places where aerosols are sprayed or highly flammable liquids are used.

• Do not use the kettle outdoors.

• Do not leave the operating kettle unattended.

• Place the kettle on a flat stable surface; do not place the kettle on the edge of the table.

• Do not direct the kettle spout at wooden furniture, electrical appliances, surfaces and objects which can be damaged by moisture, hot steam.

• Before switching the kettle on, make sure that it is placed on the base evenly.

• Use only the base supplied with the unit.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Do not touch the kettle on its bottom.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the lid opening button (4). Press the filter clamp through the spout (2) in the direction of the inside of the flask and remove it from the installation place pulling upwards. Carefully wash the filter under a jet after having slightly cleaned it with a soft brush.

• Install the filter back to its place until clicking.

• Do not immerse the kettle and the base in water or any other liquids.

• Do not wash the kettle and the base in a dishwashing machine.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

