

Wireless Noise Cancelling Stereo Headset

Беспроводные стереонаушники с функцией шумоподавления



 




https://rd1.sony.net/help/mdr/whch710n/h_zz/



©2020 Sony Corporation
Printed in Vietnam
<https://www.sony.net/>

WH-CH710N

DIGITAL AAC N Bluetooth®

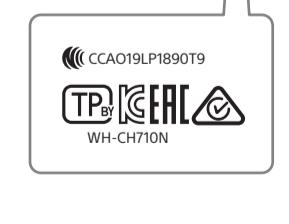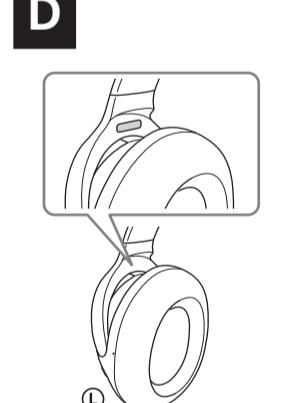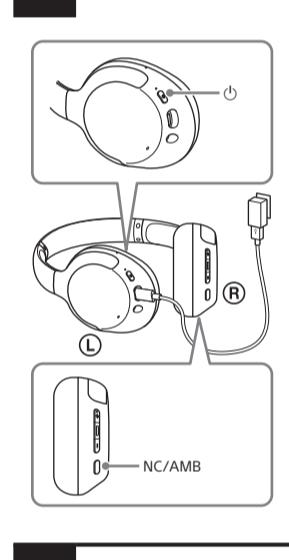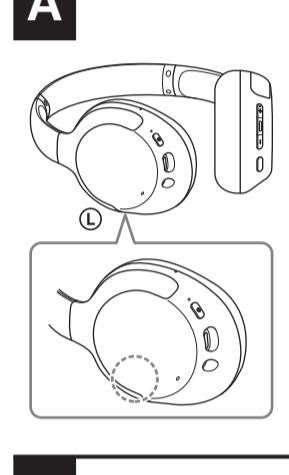

Replacement parts: earpads
Please consult your nearest Sony dealer for information about replacement parts.

Location of the serial number label
See Fig. D

CCAO19LP1890T9
TP ICERI WH-CH710N

WIRELESS NOISE CANCELLING HEADSET WH-CH710N
Sony Corporation
5V MADE IN VIETNAM

Complies with
IMDA Standards
DB00353

TRA
REGISTERED No: ER79121/20
DEALER No: DA009694/12

Precautions

On BLUETOOTH® communications

• Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may be limited depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.

• Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:

- Where there is a person between the unit and the Bluetooth device. This situation may be improved by positioning the Bluetooth device so that it faces the antenna of the unit.

- When the unit is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.

- When the Wi-Fi device or microwave oven is in use. Microwaves are emitted near the unit.

- Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.

Cleaning the unit

• When the outside of the unit is dirty, clean it by wiping with a soft dry cloth.

If the unit is particularly dirty, soak a cloth in a dilute solution of neutral detergent and wring it well before wiping. Do not use solvents such as thinner or benzene, alcohol, as they may damage the surface.

• If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Replacement parts: earpads
Please consult your nearest Sony dealer for information about replacement parts.

Location of the serial number label
See Fig. D

CCAO19LP1890T9
TP ICERI WH-CH710N

WIRELESS NOISE CANCELLING HEADSET WH-CH710N
Sony Corporation
5V MADE IN VIETNAM

Complies with
IMDA Standards
DB00353

TRA
REGISTERED No: ER79121/20
DEALER No: DA009694/12

Precautions

On BLUETOOTH® communications

• Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may be limited depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.

• Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:

- Where there is a person between the unit and the Bluetooth device. This situation may be improved by positioning the Bluetooth device so that it faces the antenna of the unit.

- When the unit is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.

- When the Wi-Fi device or microwave oven is in use. Microwaves are emitted near the unit.

- Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.

Cleaning the unit

• When the outside of the unit is dirty, clean it by wiping with a soft dry cloth.

If the unit is particularly dirty, soak a cloth in a dilute solution of neutral detergent and wring it well before wiping. Do not use solvents such as thinner or benzene, alcohol, as they may damage the surface.

• If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Replacement parts: earpads
Please consult your nearest Sony dealer for information about replacement parts.

Location of the serial number label
See Fig. D

CCAO19LP1890T9
TP ICERI WH-CH710N

WIRELESS NOISE CANCELLING HEADSET WH-CH710N
Sony Corporation
5V MADE IN VIETNAM

Complies with
IMDA Standards
DB00353

TRA
REGISTERED No: ER79121/20
DEALER No: DA009694/12

Precautions

On BLUETOOTH® communications

• Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may be limited depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.

• Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:

- Where there is a person between the unit and the Bluetooth device. This situation may be improved by positioning the Bluetooth device so that it faces the antenna of the unit.

- When the unit is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.

- When the Wi-Fi device or microwave oven is in use. Microwaves are emitted near the unit.

- Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.

Cleaning the unit

• When the outside of the unit is dirty, clean it by wiping with a soft dry cloth.

If the unit is particularly dirty, soak a cloth in a dilute solution of neutral detergent and wring it well before wiping. Do not use solvents such as thinner or benzene, alcohol, as they may damage the surface.

• If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Replacement parts: earpads
Please consult your nearest Sony dealer for information about replacement parts.

Location of the serial number label
See Fig. D

CCAO19LP1890T9
TP ICERI WH-CH710N

WIRELESS NOISE CANCELLING HEADSET WH-CH710N
Sony Corporation
5V MADE IN VIETNAM

Complies with
IMDA Standards
DB00353

TRA
REGISTERED No: ER79121/20
DEALER No: DA009694/12

Precautions

On BLUETOOTH® communications

• Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may be limited depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.

• Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:

- Where there is a person between the unit and the Bluetooth device. This situation may be improved by positioning the Bluetooth device so that it faces the antenna of the unit.

- When the unit is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.

- When the Wi-Fi device or microwave oven is in use. Microwaves are emitted near the unit.

- Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.

Cleaning the unit

• When the outside of the unit is dirty, clean it by wiping with a soft dry cloth.

If the unit is particularly dirty, soak a cloth in a dilute solution of neutral detergent and wring it well before wiping. Do not use solvents such as thinner or benzene, alcohol, as they may damage the surface.

• If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Replacement parts: earpads
Please consult your nearest Sony dealer for information about replacement parts.

Location of the serial number label
See Fig. D

CCAO19LP1890T9
TP ICERI WH-CH710N

WIRELESS NOISE CANCELLING HEADSET WH-CH710N
Sony Corporation
5V MADE IN VIETNAM

Complies with
IMDA Standards
DB00353

TRA
REGISTERED No: ER79121/20
DEALER No: DA009694/12

Precautions

On BLUETOOTH® communications

• Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may be limited depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.

• Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:

- Where there is a person between the unit and the Bluetooth device. This situation may be improved by positioning the Bluetooth device so that it faces the antenna of the unit.

- When the unit is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.

- When the Wi-Fi device or microwave oven is in use. Microwaves are emitted near the unit.

- Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.

Cleaning the unit

• When the outside of the unit is dirty, clean it by wiping with a soft dry cloth.

If the unit is particularly dirty, soak a cloth in a dilute solution of neutral detergent and wring it well before wiping. Do not use solvents such as thinner or benzene, alcohol, as they may damage the surface.

• If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Replacement parts: earpads
Please consult your nearest Sony dealer for information about replacement parts.

Location of the serial number label
See Fig. D

CCAO19LP1890T9
TP ICERI WH-CH710N

WIRELESS NOISE CANCELLING HEADSET WH-CH710N
Sony Corporation
5V MADE IN VIETNAM

Complies with
IMDA Standards
DB00353

TRA
REGISTERED No: ER79121/20
DEALER No: DA009694/12

Precautions

On BLUETOOTH® communications

• Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may be limited depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.

• Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:

- Where there is a person between the unit and the Bluetooth device. This situation may be improved by positioning the Bluetooth device so that it faces the antenna of the unit.

- When the unit is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.

- When the Wi-Fi device or microwave oven is in use. Microwaves are emitted near the unit.

- Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.

Cleaning the unit

• When the outside of the unit is dirty, clean it by wiping with a soft dry cloth.

If the unit is particularly dirty, soak a cloth in a dilute solution of neutral detergent and wring it well before wiping. Do not use solvents such as thinner or benzene, alcohol, as they may damage the surface.

• If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Replacement parts: earpads
Please consult your nearest Sony dealer for information about replacement parts.

Location of the serial number label
See Fig. D

CCAO19LP1890T9
TP ICERI WH-CH710N

WIRELESS NOISE CANCELLING HEADSET WH-CH710N
Sony Corporation
5V MADE IN VIETNAM

Complies with
IMDA Standards
DB00353

TRA
REGISTERED No: ER79121/20
DEALER No: DA009694/12

Precautions

On BLUETOOTH® communications

• Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may be limited depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.

• Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:

- Where there is a person between the unit and the Bluetooth device. This situation may be improved by positioning the Bluetooth device so that it faces the antenna of the unit.

- When the unit is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.

- When the Wi-Fi device or microwave oven is in use. Microwaves are emitted near the unit.

